



Design Registered Product
Registration # 323986/7/8/9S

DiamondGrip® Handrail Domes



Aged Care facilities need not include Tactile Indicators on stairways, escalators, travelators and/or ramps, as long as handrails incorporate a raised dome button in accordance with AS1428.


Ground tactile indicators can cause problems for users of walking frames and wheelchairs. As a result Aged Care facilities are exempt from using TGSIs under the NCC if raised dome buttons are used on handrails. CTA manufactures DiamondGrip® Handrail domes which incorporate a Braille message and are available as a combination set, advising blind or partially sighted pedestrians they are approaching a stair or ramp from either an upwardly or downwardly direction.

A peel and stick backing makes installation and compliance with the codes extremely easy to achieve.


KEY FEATURES

- Meets the requirements of AS1428.1
- Low profile design to ensure they do not pose a safety risk
- Peels and Stick install
- Manufactured from a single piece of 316 marine grade stainless steel
- Durable, long-lasting
- Match the style of most hand rail applications
- Are highly functional, providing enhanced awareness i.e direction of travel.


PRODUCT OPTIONS

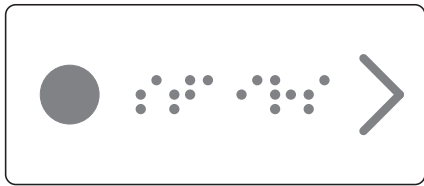


Stairs: Left Side - DGSD

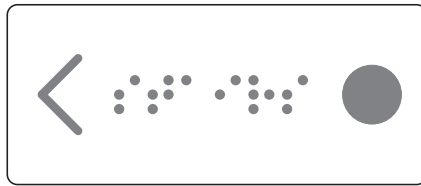

Stairs: Right Side - DGDSU

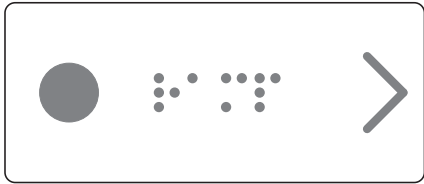

Ramp: Left Side - DGRD

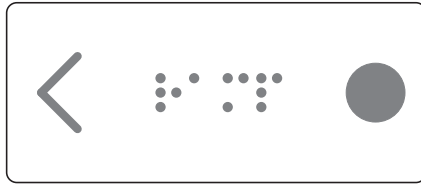

Ramp: Right Side - DGRU

MATERIAL

Manufactured from Marine Grade 316 Stainless Steel with satin finish.

APPLICATIONS

Handrails at the top & bottom of stairs or ramps in aged care facilities, an alternative to ground tactiles indicators.



M - DGDM



U One - DGDU1



U Two - DGDU2




U Three - DGDU3




U Four - DGDU4



Level One - DGDL1

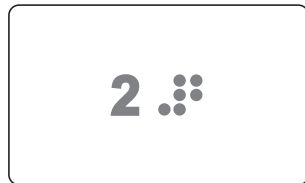

Level Two - DGDL3

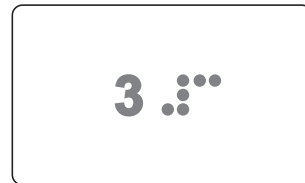


Level Three - DGDL3




Level Four - DGDL4



Level Five - DGDL5

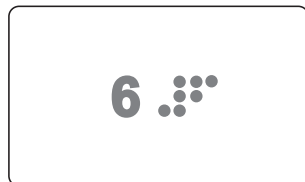


Level Six - DGDL6

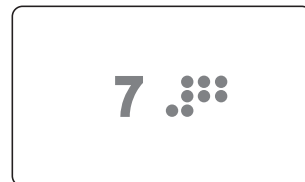

Level Seven - DGDL7



Level Eight - DGDL8

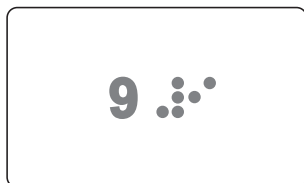

Level Nine - DGDL9



Level Ten - DGDL10



Level Eleven - DGDL11




Level Twelve - DGDL12

CUSTOM OPTIONS

CTA DiamondGrip® handrail domes can be custom made to your requirements such as locations within buildings and other spatial information. Please contact CTA for further details.

DIMENSIONS

50mm or 70mm long and 40mm wide formed into an ark with a 20mm radius. Suitable for all standard handrails.

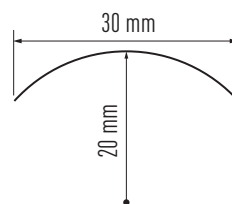

INSTALLATION

Easy Peel and Stick install. Handrail Domes are flexible and designed to conform with handrails between 40-60mm. Refer to CTA installation instructions for handrails above 40mm.

CALL CTA ON 1300 282 282
TO ARRANGE A MEETING WITH A SALES CONSULTANT

VICTORIA | NEW SOUTH WALES | QUEENSLAND | WESTERN AUSTRALIA

